


EDFA AXMOUTH MOORINGS

Setting up your Mooring Lines

Always moor Bow Up river!

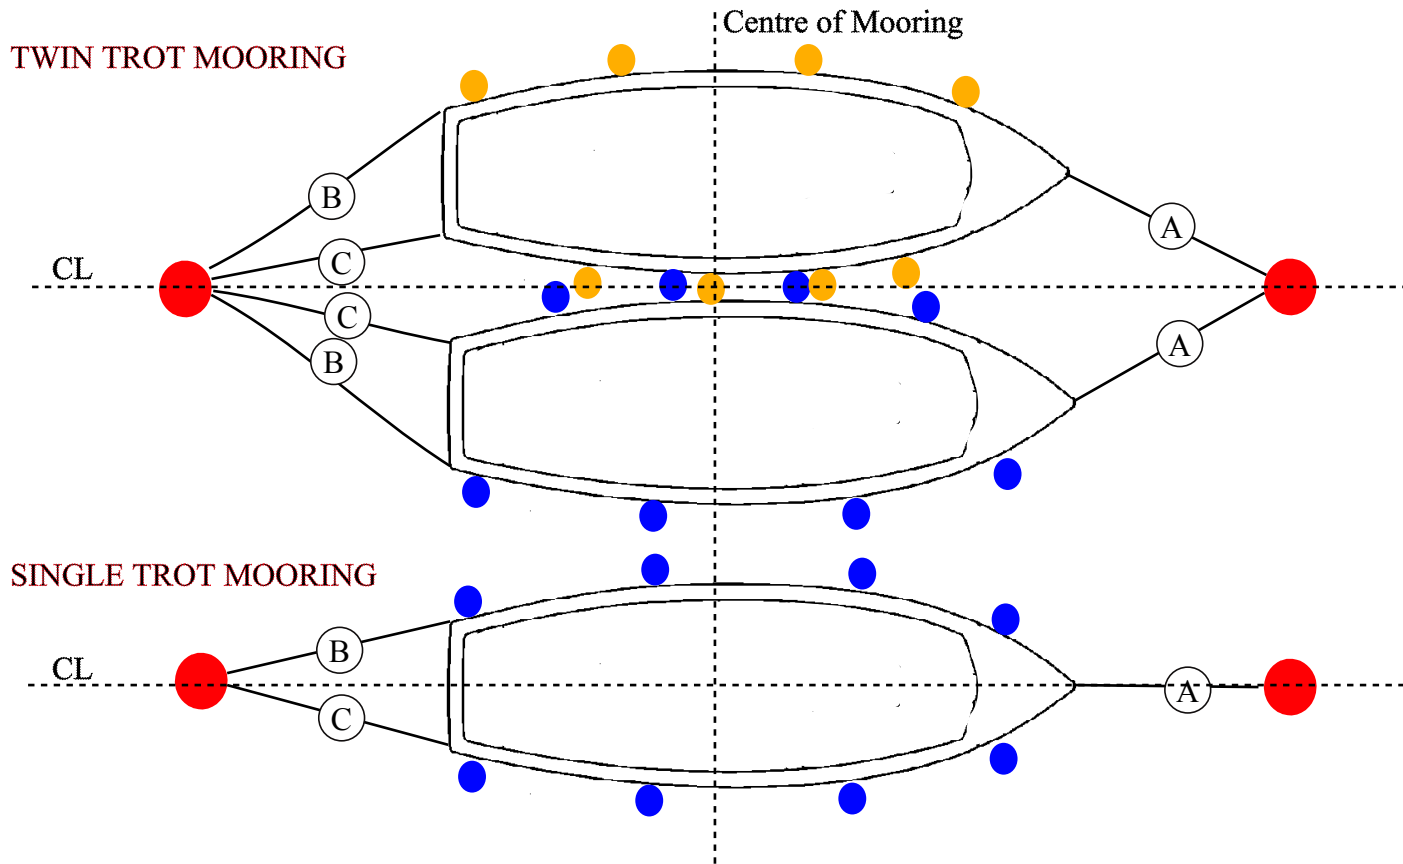

Ideally set your mooring line length at High Tide.

Set both boats centred between the fore Mooring buoy and the aft mooring buoy by setting the length of (A) the fore mooring Line.

Always use two aft mooring lines (B)+(C) The outer line being longer than the inner Line to prevent squeezing the boats Together.

Liaise with your partner boat to balance Your mooring and reduce squeezing to a minimum.

Allow enough length in the system to Account for Spring tide plus flood Conditions.

For a single craft set the aft mooring lines Equal then follow the set up guides above.

Use Thimble eye splices and adequate Locked Shackles for the mooring line to buoy connections.

Use more than enough fenders between Boats and on the outer side of the mooring

Always fit Prop Buckets when mooring up!

Mark your Tender with your boat name
Eg. "TT Ollie"

Lock your Tender to the rail.

Consult the Harbour Master before Mooring for the First time or if you have any questions